

A project in i3 lite app can work in 3 modes:

- Local mode - if this mode is on, a panel is connected to the server only in the local net.
- External mode - this mode means that a panel is connected to the server only via the Internet.
- Auto - is a mixed mode of work. An installer indicates the name of the local Wi-Fi net. The app reads the net name, to which a panel is connected at the moment, and if the name agrees with the name of the home network, the app will connect to the server by the local IP-address. If the name of Wi-Fi net does not agree with the name of the home net or a panel has only 3g\4g connection, the app switches to the mode of work via the Internet.