

go to the Server tab. The following fields are interesting for us in this tab:

- **Work mode** - a mode to connect to iRidium server.
- **iRidium Cloud gate** - a mode of work via iRidium cloud

If you want a project to work only in the local net, set "Local" value in the "Work mode" field "Local".
To work with the server via the Internet set External or Auto values.