

activate connection to iRidium cloud gate in the main "Server" tab