

10:49

Config Change Server

General

Floors & Rooms

Devices

Server

Schedules

Routines

Macros

Modes

Users

Name: UMC_Cabinet

Internal Host: 192.168.0.120

Port: 30464

Version: 1.2.5.18587

Update: >

PROJECT CONTROL

Work mode: Auto switch: >

Local WiFi: >

Connection to cloud (beta): <input checked="" type="checkbox"/>

External Host: >

External API Port (5412): >

External Protocol Port (30464): >

Project synchronization: <input type="button" value="Sync now" />

Activate

Start project

This screenshot shows a software interface for managing a server. The left sidebar has tabs for General, Floors & Rooms, Devices, and Server, with Server currently selected. The main area displays various configuration parameters: Internal Host (192.168.0.120), Port (30464), Version (1.2.5.18587), and Update. Below these are sections for PROJECT CONTROL (Work mode set to Auto switch), Local WiFi, Connection to cloud (beta), External Host, External API Port (5412), and External Protocol Port (30464). A 'Sync now' button is present under Project synchronization, and an 'Activate' button is at the bottom.